

BUSINESS DESK LAMP

OPERATING MANUAL

Production Description

- LED lighting technology uniform and soft light for eyes.
- Using high performance LED light source, higher brightness and higher luminous.
- High sensitivity touch dimmer control, bring elegant control experience.
- Three grade adjustable brightness is content for various kinds of daily scene.
- Easier to take in box, flexible goose neck lamp arm, can light for different angle as your requirement.
- Energy-saving, low power consumption, low degradation, save up to 80% energy.
- Eco-friendly free mercury and plumbum, relieving polluting the environment, creating low carbon eco-friendly life.
- Without fragile glass element, safer and more convenient.
- Long lifespan (More than 30, 000 hours).
- High definition VA screen calendar with alarm clock.

Instruction

The range of activity for lamp arm and chimney:

- Please control the base of lamp when adjusting the angle.
- The range of activity for lamp arm is 150 degrees (It may be broken if you over-adjusting).

Instruction

- Connect the adapter in the behind of the lamp.

- Touch the key to turn on/off the lamp.

Instruction

Battery replace.

Function

Temperature: Degree centigrade/ fahrenheit

Alarm bell

Snooze function

Hour

Minute

Date

Week

Specifications

Color Temperature	5000-6000K
CRI	>80Ra
Power input	5V 1A
Material	ABS+RUBBER
Luminous Flux	>200LM
Power	5W

Important!
Thank you for purchasing our products. To guarantee your rights, please fill in this form properly, thank you!

Name	
Address	
Telephone	
House number	
Purchase date	
Item number	
dealers	Note: this field requires the dealers seal!

Warning: please keep this warranty paper for your presentation.

Operation for Setting Calendar and Alarm snooze

DOWN
UP
SET
MODE

Data and Time setting

- Under normal mode, press SET key enter date and time setting mode, press SET again to enter the next setting, the sequence of setting as below: hour-minute-year-month-day-back.
- Press UP and DOWN setting the day of week will vary accordingly.
- Under setting mode, Press MODE or no operation in 60 seconds will back from set mode and display the time.
- Under normal mode, press UP transfer 12 and 24 hours format.

Snooze function setting

- Under normal mode, press MODE enter alarm mode.
- Under alarm mode, press SET enter alarm setting, press SET again enter the next setting, the sequence of setting as below: Hour-minute-year-month-day-back.
- Press UP and DOWN key to set.
- Under alarm mode, press UP and DOWN key can open and close the snooze and alarm, press it again enter the next function, the sequence as below: Open the alarm-open the snooze-close alarm and snooze.
- When reach the alarm, the alarm will last 1 minute, snooze time reach, alarm will ring again, press SET key or any button can stop the alarm.

Warranty Card

Applicable for:

- Since buying date, the user enjoys one year free repair services under normal use. After one year, will be charged according to each component part cost.
- In case change component part, will be charged according to our company's component part cost list.
- The following situations not free repair in warranty period:
 - Damage caused by natural earthquakes, rat disaster, and abnormal use.
 - Damage caused in transportation, fall, and unproper storage.
 - Consumable component, such as spare parts, batteries, light bulbs, etc.
 - Warranty information record is not complete, no purchase date, no buying shop seal, etc.
 - Featured using environment, such as humidity, sulfur area, high salty and the smoke, etc. easy corrosion area.
 - Using not according to the instructions.
- Special offer:**
 - When return to factory for repair, the user should make sure the LED lamp packed properly, to avoid any damage during transportation.
 - Factory not responsible for the damages caused by the user themselves unproper disassemble.

Attention:

- Do not Self-disassemble the product, to avoid any electric shock.
- Please use vender's specified adapter and power socket, to maintain normal working.
- Please do not over-adjusting the joint activity parts, to avoid any damage to the lamp.
- Please do not use the lamp in high-temperature or high-humidity environment.
- Please don't look at the LED light source straightly, to avoid your eyes hurt.
- In case below conditions occur, please pull out the power cord, stop using (if needed, please call for help):
 - The power cord or power plug break
 - The lamp holder damp or rain
 - The shell and joint activities of the lamp holder breaks
 - The lamp holder smokes or sparks
 - The abnormal flickering or break of the LED light bulb

Työpöydän lamppu

Käyttöopas

Tuotekuvaus

1. LED-valaistustekniikka, yhtenäinen ja pehmeä valo silmille.
2. Korkean suorituskyvyn LED-valonlähde, suurempi kirkkaus ja valovoima.
3. Erittäin herkkä kosketushimmenninohjaus, elegantti ohjauskokemus.
4. Kolmen asteen säädettävä kirkkaus sopii erilaisiin päivittäisiin tehtäviin.
5. Helppo ottaa laatikosta, joustava taittuva lampunvarsi, valaisee eri kulmissa tarpeidesi mukaan.
6. Energiaa säästävä, alhainen virrankulutus, alhainen valonhajonta, säästää jopa 80 % energiaa.
7. Ympäristöystävällinen: ei sisällä elohopeaa tai lyijyä, ei saastuta ympäristöä, edistää vähähiilistä, ympäristöystävällistä elämää.
8. Ei särkyviä lasielementtejä, turvallista ja kätevää.
9. Pitkä käyttöikä (yli 30 000 tuntia).
10. Teräväpiirto VA-näyttökalenteri, herätyskello

Ohje

Liitä adapteri lampun taakse


Kosketa näppäintä kytkeäksesi lamppu päälle/pois

Patterin vaihto

Lampun ja varren toiminta

1. Pidä kiinni lampun jalustasta, kun säädät kulmaa
2. Lampun varren toiminta-alue on 150 astetta (voi rikkoontua, jos säädät liikaa)

Toiminnot

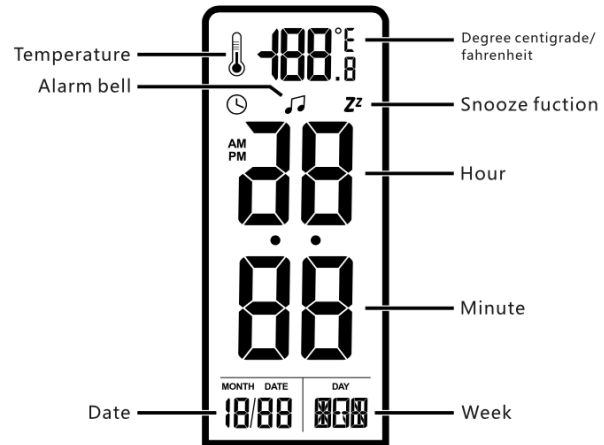

VAS: Lämpötila

Herätyskello

Päivämäärä

OIK: Celsiusaste/Fahrenheit

Torkutustoiminto

Tunti

Minuutti

Viikko

Kalenterin ja hälytyksen torkkutoiminnon asettaminen

Päivämäärän ja kellonajan asetus

1. Normaalitilassa paina SET-näppäintä siirtyäksesi päivämäärän ja kellonajan asetustilaan, paina uudelleen SET siirtyäksesi seuraavaan asetukseen, asetusten järjestys seuraavasti: tunti-minuutti-vuosi-kuukausi-viikonpäivä-takaisin
2. Paina UP ja DOWN, jolloin viikonpäivä vaihtelee vastaavasti.
3. Paina asetustilassa MODE tai mitään toimintoa 60 sekuntia palataksesi asetustilasta ja nähdäksesi kellonajan.
4. Normaalitilassa paina UP siirtää 12 ja 24 tunnin valintaan.

Torkkutoiminnon asetus

1. Normaalitilassa paina MODE siirtyäksesi hälytystilaan
2. Herätystilassa paina SET syötä hälytysasetus, paina uudelleen SET syötä seuraava asetus, asetusten järjestys: tunti-minuutti-vuosi-kuukausi-viikonpäivä-takaisin
3. Paina UP ja DOWN näppäimiä asettaaksesi.
4. Herätystilassa painamalla UP- ja DOWN-näppäimiä voi avata ja sulkea torkkutilan, paina sitä uudelleen siirtyäksesi seuraavaan toimintoon, järjestys: Avaa herätys – avaa torkku – sulje herätys ja torkku
5. Herätyshälytys kestää 1 minuutin, torkkuaika saavutetaan, herätys soi uudelleen, paina SET-näppäintä tai mitä tahansa painiketta hälytyksen lopettamiseksi

Tekniset tiedot

Väriämpötila 5000–6000 K

CRI >80Ra

Sisääntulo 5V 1A

Materiaali ABS + Kumi

Valovirta >200 LM

Power 5W

Huomioi

Älä pura tuotetta itse sähköiskun välttämiseksi.

Käytä myyjän määrittämää adapteria ja pistorasiaa normaalin toiminnan ylläpitämiseksi

Älä säädä vartta liikaa, jottei lamppu vaurioidu

Älä käytä lamppua korkeassa lämpötilassa tai kosteassa ympäristössä

Älä katso LED-valonlähdetä suoraan, jotteivat silmäsi vahingoittuisi

Jos alla olevat olosuhteet täyttyvät, vedä virtajohto irti, lopeta käyttö (tarvittaessa soita apua)

Virtajohto ja virtapistoke rikkoontuvat

Lampun pidike on kostea tai altistunut sateelle

Lampunpitimen kuori ja toiminnot rikkoontuvat

Lampunpidin savuaa tai kipinöi

LED-lampun epänormaali välkkyminen tai katkeaminen

Takuukortti

Sovellettavissa

Ostopäivästä lähtien käyttäjä nauttii yhden vuoden ilmaisesta korjauspalvelusta normaalikäytössä. Vuoden kuluttua laskutetaan kunkin komponentin osan kustannusten mukaan.

Jos vaihdat komponenttia, veloitetaan yrityksemme komponenttikustannusluettelon mukaan.

Seuraavat tilanteet eivät ole ilmaisia korjauksia takuuajana.

1. Maanjäristyksen, rottakatastrofin ja epänormaalin käytön aiheuttamat vahingot.
2. Kuljetuksessa, putoamisesta ja väärästä varastoinnista aiheutuneet vauriot
3. Kulutusosat, kuten varaosat, akut, polttimot jne.
4. Takuutietokortti ei ole täydellinen, ei ostopäivää, ei myymälän sinettiä jne.
5. Ei suositeltu käyttöympäristö, kuten kostea, rikkipitoinen, korkeasti suolainen jne. korroosioherkkä alue.
6. Käyttöohjeiden vastainen käyttö.
7. Erikoistarjous

Palauttaessaan tehtaalle korjattavaksi, käyttäjän tulee varmistaa, että LED-lamppu on pakattu kunnolla, jotta vältetään vaurioilta kuljetuksen aikana.

Tehdas ei vastaa vahingoista, jotka käyttäjä itse on aiheuttanut virheellisen purkamisen johdosta.